

How to Order

Part Numbering System

| Series | Size | Direction | Rotation | Seals | Coatings | Trav. Stops | Mounting | Springs |
|--------|------|-----------|----------|-------|----------|-------------|----------|---------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |

| 1 Series | |
|----------|------------|
| 22 | Double Act |
| 23 | Single Act |

| 2 Size | |
|--------|------|
| 0050 | 0350 |
| 0125 | 0450 |
| 0175 | 0550 |
| 0250 | 0750 |

| 3 Direction | |
|-------------|-----|
| 4 | 90° |

| 4 Rotation | |
|------------|-------------------|
| 1 | Standard Rotation |

| 5 Seals | |
|---------|-----------------------------------|
| 1 | Standard 30 to +176 |
| 2 | High Temperature Seals -5 to +300 |
| 3 | Low Temperature -80 +176 |

| 6 Coatings | |
|------------|------|
| 0 | None |

| 7 Travel Stops | |
|----------------|----------|
| 0 | Standard |

| 8 Mounting | |
|------------|-------|
| 1 | "ISO" |

| 9 Springs | |
|-----------|---------|
| 0 | None |
| 1 | 2 |
| 2 | 4 |
| 3 | 6 |
| 4 | 8 |
| 5 | 10 |
| 6 | 12 |
| 7 | Special |

Example: Size 0250 Rotation 90°
 Std. coating Double Acting

| Series | Size | Trim |
|--------|------|---------|
| 22 | 0250 | 4110010 |